




Basic Installation of Body Side Moldings

Location

Most moldings are installed at the apex or the crown of the doors (the part of the door that sticks out the farthest). Some vehicles will have an extruded body line and this would be the apex of the door.

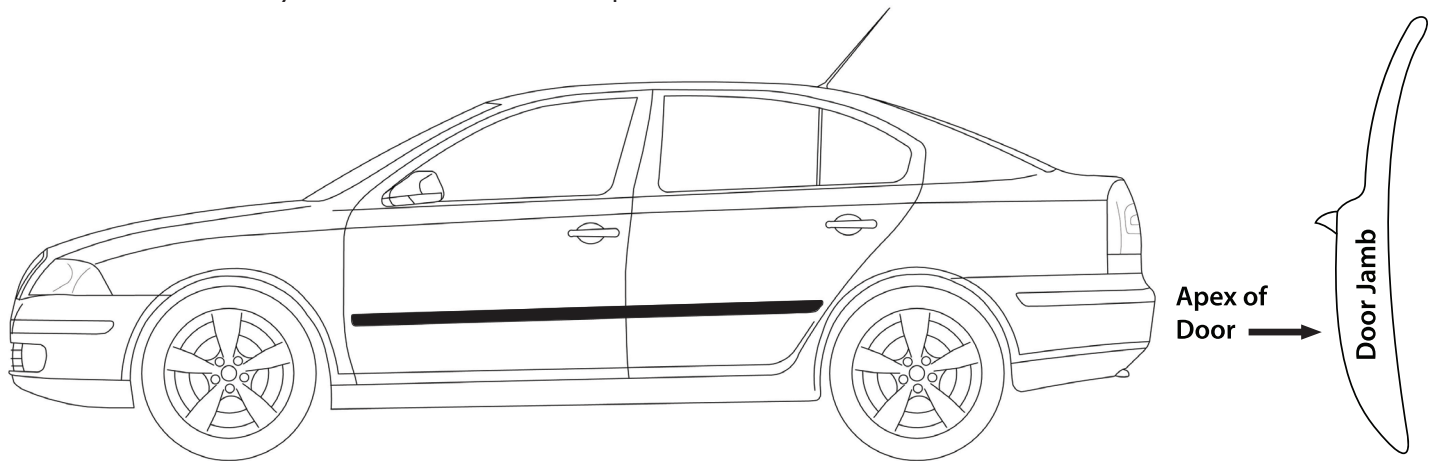

Clean & Prep

If the vehicle has wax on the surface where the molding is to be applied, the wax will need to be removed using a general purpose wax and grease remover. Next, clean the surface where the moldings are to be applied with the supplied alcohol wipes. Go back over the surface with a clean cloth to remove any residue. Apply the supplied adhesive promoter to the surface where the molding will be installed.

Installation

Using 3/4" masking tape, set a straight guideline right above where the molding is to be installed on the apex of the door. Peel back 12" of the red liner tape on the top and bottom on the backside of the molding. Apply the molding using the bottom edge of the masking tape as your guide and peel the rest of the red liner as you install the molding.

Post Installation

Use a clean, soft cloth and apply even pressure along the entire length of the molding to insure proper adhesion. Remove the masking tape and you will have installed a OEM style body side molding for years of protection.

**RESTYLERS'
CHOICE**

1-800-733-3316
www.restylerschoice.com

