

Installation Instructions Bolt-On Spoiler with Light

Lifetime Warranty

Kit Includes:

Spoiler (2) 3M Scotchlock™ connectors
Gaskets Split Loom
Locator Strips (4) Access Hole Plugs
Mounting Screws

Tools Required:

Drill
Drill Bits (1/8", 5/16", and 3/4")
Panel Puller
3/8" Ratchet or Nut Driver
Measuring Tape
Pliers
Masking Tape

Important: Always test fit part before prepping, painting or drilling holes.

Step 1.

Start out by removing the trunk liner if one exists (See figure 1). Place the locator strips into the mounting holes on spoiler. A small piece of masking tape is helpful in holding the locator strips in position (See figure 2).

Step 2.

Place spoiler on closed deck lid and align to proper position. A measuring tape will ensure a perfect alignment (See figure 3).

Step 3.

Using masking tape, secure locator strips to the deck lid of the vehicle (See figure 4). Simply remove the spoiler by lifting straight up, leaving the locator strips still secured to the deck lid.

Step 4.

Using a 1/8" drill bit, drill thru the locator strip holes and into the deck lid. (See figure 4)

Step 5.

Remove locator strips and using a 5/16" drill bit or we prefer a unibit, drill thru the 1/8" hole in step 4. (See figure 5) Drill hole for LED light wiring and feed wire through the decklid. (See Figure 6)

Step 6.

Pull back pedestal gaskets exposing mounting tape and place spoiler on decklid and using supplied screws secure to the vehicle using a ratchet or nutdriver. **Do not use drill to tighten screws, as you may drive the screw through the top of the spoiler.** (See Figure 7)

TIP: Gasket material is extremely sticky once exposed, so we found that spraying it with water or glass cleaner will allow you to reposition spoiler as needed.

Step 7.

It is recommended to splice into the 3rd brake light in the vehicle and attach the spoiler wires using the (2) 3M Scotchlock connectors. (See Figure 8) Cover exposed wiring with split loom.

Step 8.

Apply small amounts of silicone based caulk over mounting screws as this will help prevent leaking, rusting or loosening of screws. (See figure 9) Insert access hole plugs.

Step 9.

Finish your install by vacuuming any debris or metal shavings, reinstall any panels, mats or items that may have been removed earlier.



FIGURE 1

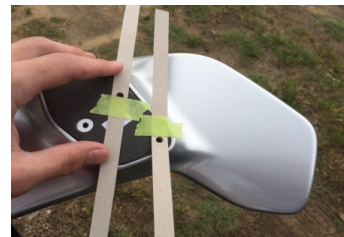


FIGURE 2



FIGURE 3



FIGURE 4



FIGURE 5



FIGURE 6



FIGURE 7

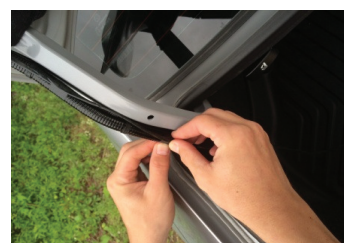


FIGURE 8



FIGURE 9



FINISHED PRODUCT!